


OPERATING INSTRUCTIONS

- 1 To lower the chair, sit on the seat and lift the lever "A".
- 2 To raise the height of the chair stand up and lift the lever "A".
- 3 To adjust the height of the backrest turn the knob "B" anticlockwise, position the backrest at the desired height and lock into place by turning the knob "B" clockwise.
- 4 To adjust the inclination of the backrest and seat, lift the lever "C"; to lock the position, release the lever "C".

If gas pump does not work please sit very heavily on the chair several times and then try again.

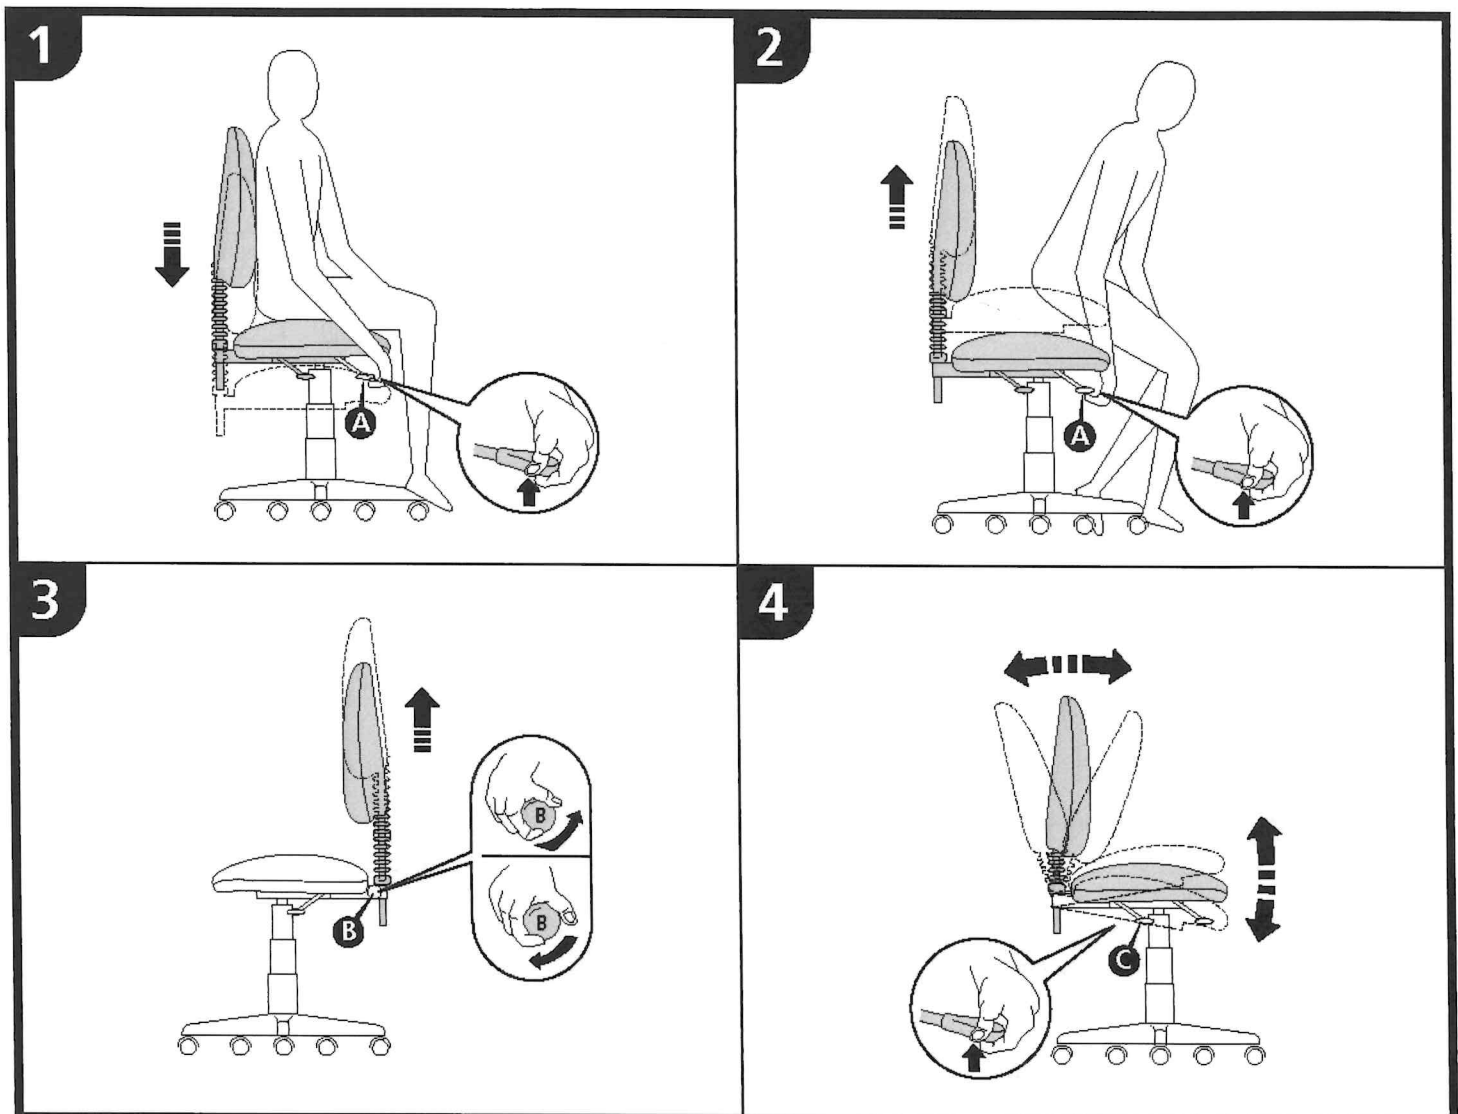

IMPORTANT INFORMATION REGARDING OUR SEATING PRODUCTS:

Use this product only for seating one person at a time.

Do not use chair unless all bolts, screws and knobs are tight.

At least every 6 months, check all bolts, screws and knobs to be sure they are tight.

If parts are missing, broken or worn, stop use of the product until repairs are made using factory authorized parts.

FAILURE TO FOLLOW THESE WARNINGS CAN RESULT IN SERIOUS INJURY!


General information:

The seating product you have has been designed for normal use, which is in typical office environment for 8 hours per day, 5 days per week. The castors furnished with the seating product are intended for use on soft floor materials, such as carpet.


REMEMBER:

AT LEAST EVERY 6 MONTHS, CHECK ALL KNOBS, BOLTS AND SCREWS TO MAKE SURE THEY ARE TIGHT AND SECURE.


MOD. ASYNCHRO TILT (b)

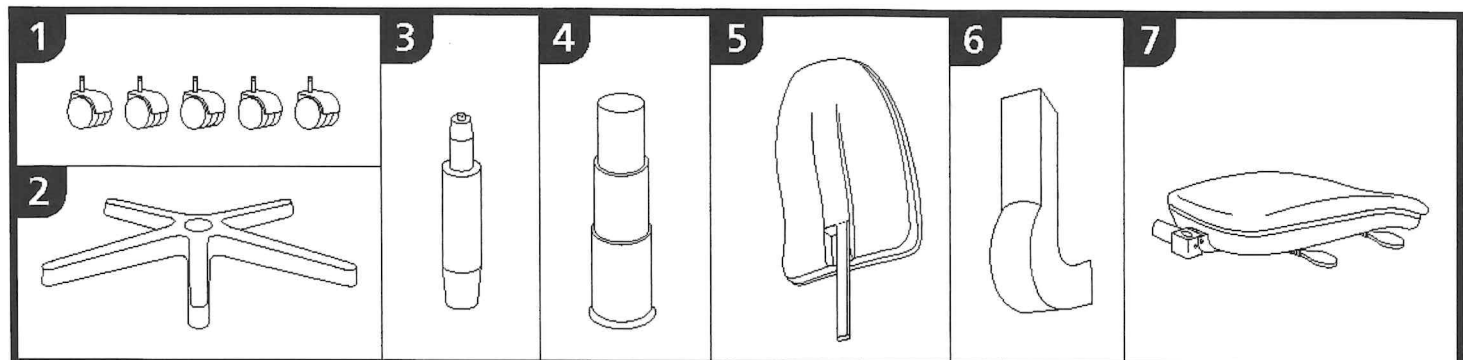


STEP
A

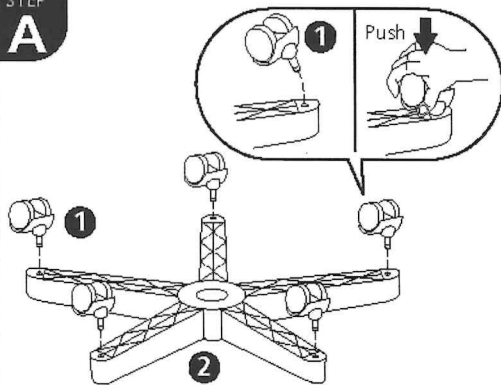


STEP
B

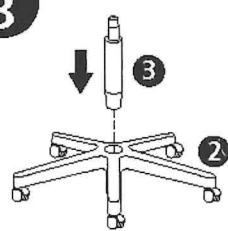

Place the 5 star base with the castors inserted onto the floor. Put the gas pump into the hole in the 5 star base.

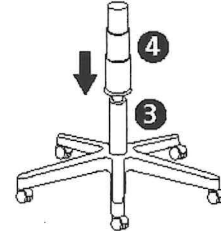

Place the plastic telescopic cover over the gas pump and push downwards.

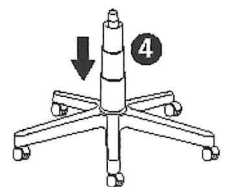

Push the plastic telescope all the way down so that it touches the 5 star base.

STEP
C

PAY ATTENTION

- 1 - UNSCREW THE KNOB b
- 2 - INSERT THE PLASTIC COVER BELLOW
- 3 - SCREW THE KNOB b

